


# Assembly Instructions Accessories for Wet Zone Flood Protection Mini-Drain

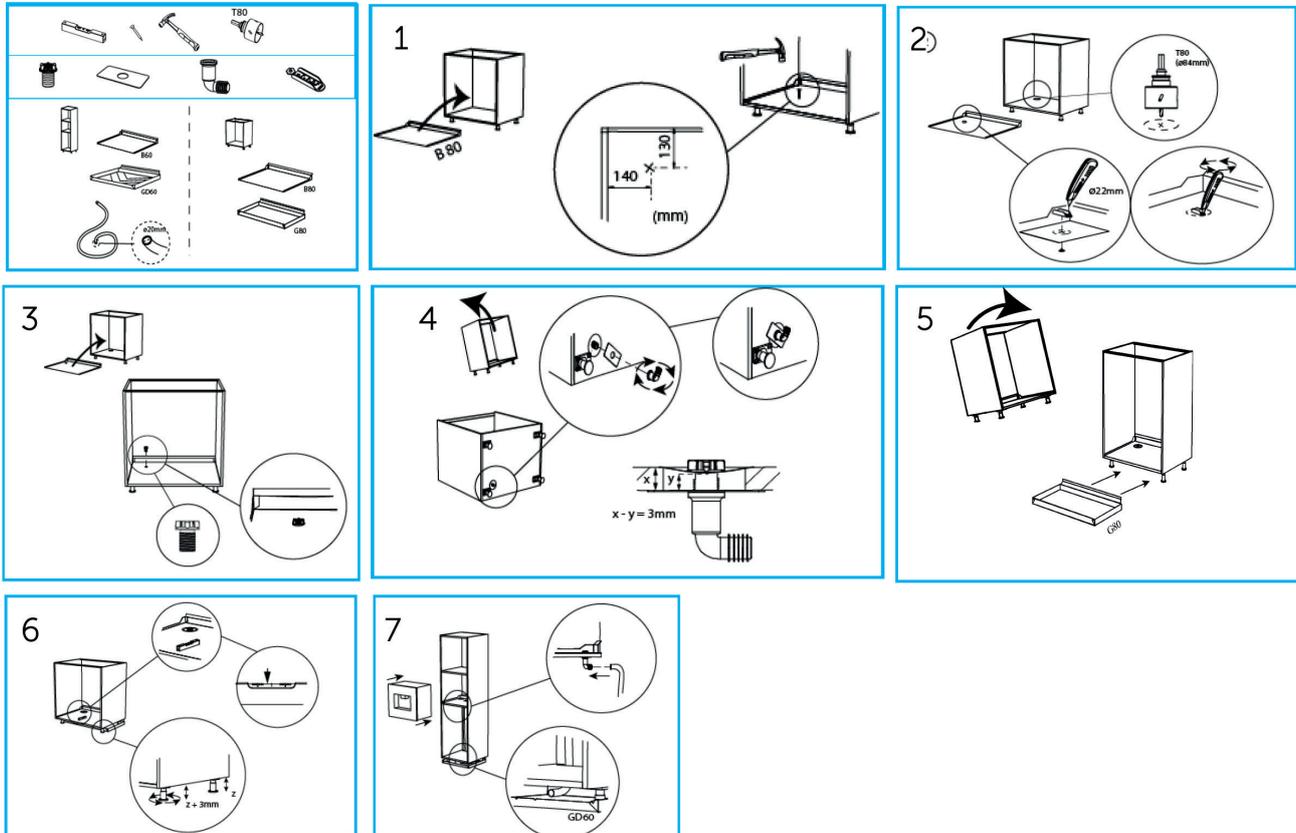

- Place the base cabinet insert in the cabinet. Measure 130 mm from the back wall of the cabinet and 140 mm from the side wall and mark the centre of the hole with a nail that is nailed through the base cabinet insert so that the marking is visible on the bottom panel of the cabinet.
- Remove the base cabinet insert. Drill (see the marking on the bottom panel) the hole with hole saw/cutter T80 (80 mm). The finished hole measures  $\text{Ø}84$  mm. Unscrew the spike from the hole punching tool. Place the spike against the centre mark on the underside of the base cabinet insert. Press down on the cabinet insert until the spike penetrates through the plastic. Place the hole-making tool over the spike and select hole size 22 mm. Place a utility knife in the gap on the hole tool and cut out a round hole.
- Place the base cabinet insert in the cabinet and insert the screw end of the mini-drain through the insert.
- Place the back of the cabinet against the floor. Attach the metal plate to the screw and then the pipe section and screw tight until the insert forms a slope (corresponding to 3 mm) against the screw part.
- Place the cabinet upright and place the Floor Protection under the base cabinet.
- Screw the front legs of the cabinet up +3 mm relative to the back legs.
- If the raised water-connected machine is done in accordance with 1-5 + attach a hose (drain hose dishwasher) to the pipe section and place the other end of the hose in the floor protection under the cabinet.

SCAN CODE FOR MORE INFO ABOUT THE PRODUCT.



## Product

Tollco Accessories for Wet Zone Flood protection mini drain

## RSK

7008334

## Item no.

3801004-09-001

## Dimensions

$\text{Ø} 22$  mm

## TOLLCO AB

Rubanksgatan 4, 741 71 Knivsta, Sweden  
Tel +46 18 34 90 10. [info@tollco.se](mailto:info@tollco.se) [tollco.se](http://tollco.se)



Accepterad  
monteringsanvisning  
2021-1

# TOLLCO

Your protection against water damage

20211012